



Указание по эксплуатации KSR Магнитно роликового показания со системой продувания

Operating instruction KSR Magnetic Roller Display with purge

Просим сохранить для дальнейшего пользования / Please retain for future usage

При пуске установки необходимо продувать КСР - Магнитно роликовое показание со сухим воздухом или азотом до достижения рабочей температуры. Магнитно роликовое показание имеет два места для подключения продувки (вход/выход).

Для продувки отвинтить затвор (Поз.4) снятием перекидной гайки (Поз.3) и привинтить соединение для шланга (Поз.5). Натягивать перекидную гайку снова (Поз.3). Шланговое соединение входит в комплект поставки.


Продувка можно закончить после достижения рабочей температуры. Затем закрывайте Магнитно роликовое показание снова.

Please purge magnetic roller indicator continuously with dry process air or nitrogen during commissioning. In order to do this, the roller indicator is equipped with two purge connections (inlet / outlet).

For purge, adapters hose adapter nut (pos.

Purging is completed when the process has reached its set temperature. Please seal the purge connections again with the end plugs.

Давление / Pressure: ≤ 1 bar

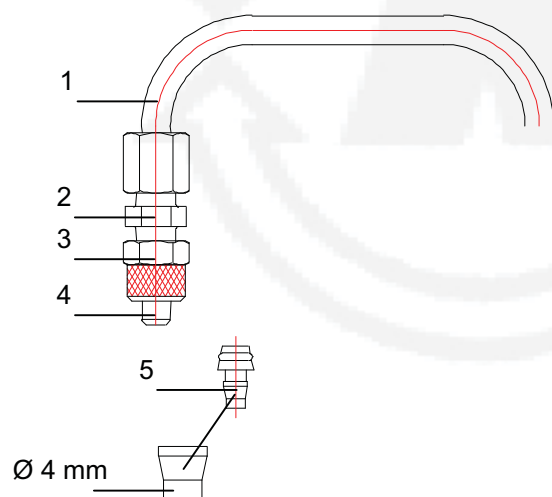

Соединение продувки / Purge

- 1 Труба / tube
- 2 Соединение / fitting
- 3 Перекидная гайка M10x1 / SW12x12 / hose nut
- 4 Затвор с кольцом «О» / end plug with O-ring
- 5 Соединение для шланга / hose adapter

